
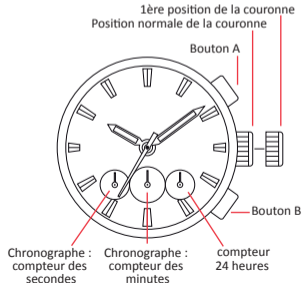


## NOTICE D'EMPLOI N°514

CARACTÉRISTIQUES  
PRINCIPALES:

■ CHRONOGAPHE

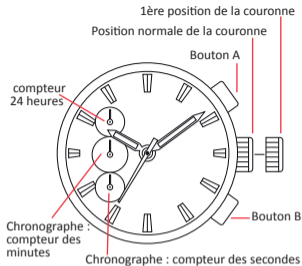

### ■ Réglage de l'heure:

Tirer la couronne jusqu'à la deuxième position et la tourner dans le sens horaire pour obtenir l'heure voulue. Clore le réglage en la replaçant à sa position normale. La trotteuse du compteur des secondes se remet en route.

### ■ Utilisation du chronographe:

Le chronographe peut mesurer et afficher des temps par unités d'une seconde, d'une seconde à 29 minutes 59 secondes.

#### ■ Mise en marche:

Appuyer sur le bouton A : le chronographe démarre.  
Réappuyer sur le bouton A : le chronographe s'arrête.  
En pressant le bouton A de nouveau, le chronographe se remet en marche.  
Remettre à zéro : appuyer sur A pour arrêter le chronographe et sur B pour remettre à 0

### ■ Réinitialisation du chronographe:

Ce type de réglage s'effectue après le remplacement de la pile et lorsque la trotteuse du chronographe ne revient pas à zéro après la remise à zéro.

Tirer la couronne.



Appuyer sur le bouton A ou B pour remettre les aiguilles des compteurs du chronographe à zéro (elles avanceront rapidement en maintenant le bouton A ou B appuyé).

Enfoncer la couronne à sa position normale lorsque l'aiguille a été remise à zéro.

**INSTRUCTION  
MANUAL  
N°514**

**MAIN FEATURES:**

■ **CHRONOGRAPH**

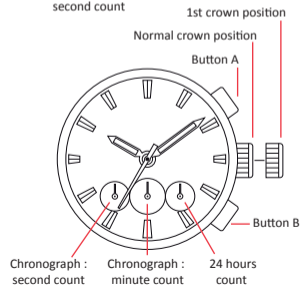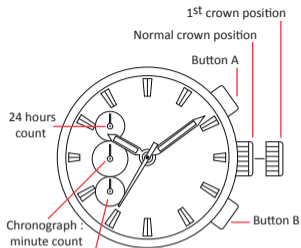

■ **Time setting:**

Pull the crown out to the first position. Turn clockwise to set hour and minute hands.

Push crown back to normal position, second count hand begins to run.

■ **Using the chronograph:**

This chronograph is able to measure and display time in units of one seconde to a maximum of 29 minutes 59 seconds.

■ **Measuring time with the chronograph:**

Start the chronograph by pressing button A.

Stop by pressing button A again.

Start again by pressing button A a third time.

Reset by pressing button B : second and minute counts hands return to zero position.

■ **Chronograph reset :**

This procedure should be performed if count second hand does not return to zero position after chronograph stopping or after the battery has been replaced.

Pull the crown out to the first position. Press button A or B to set the second count hand to the zero position. (It advance rapidly by pressing buttons A or B continuously.)

When the hand is at zero position, push the crown back to normal position.