


**NOTICE D'EMPLOI**  
**N°511**

**CARACTÉRISTIQUES**  
**PRINCIPALES:**

- CHRONOGRAPHE
- DATEUR

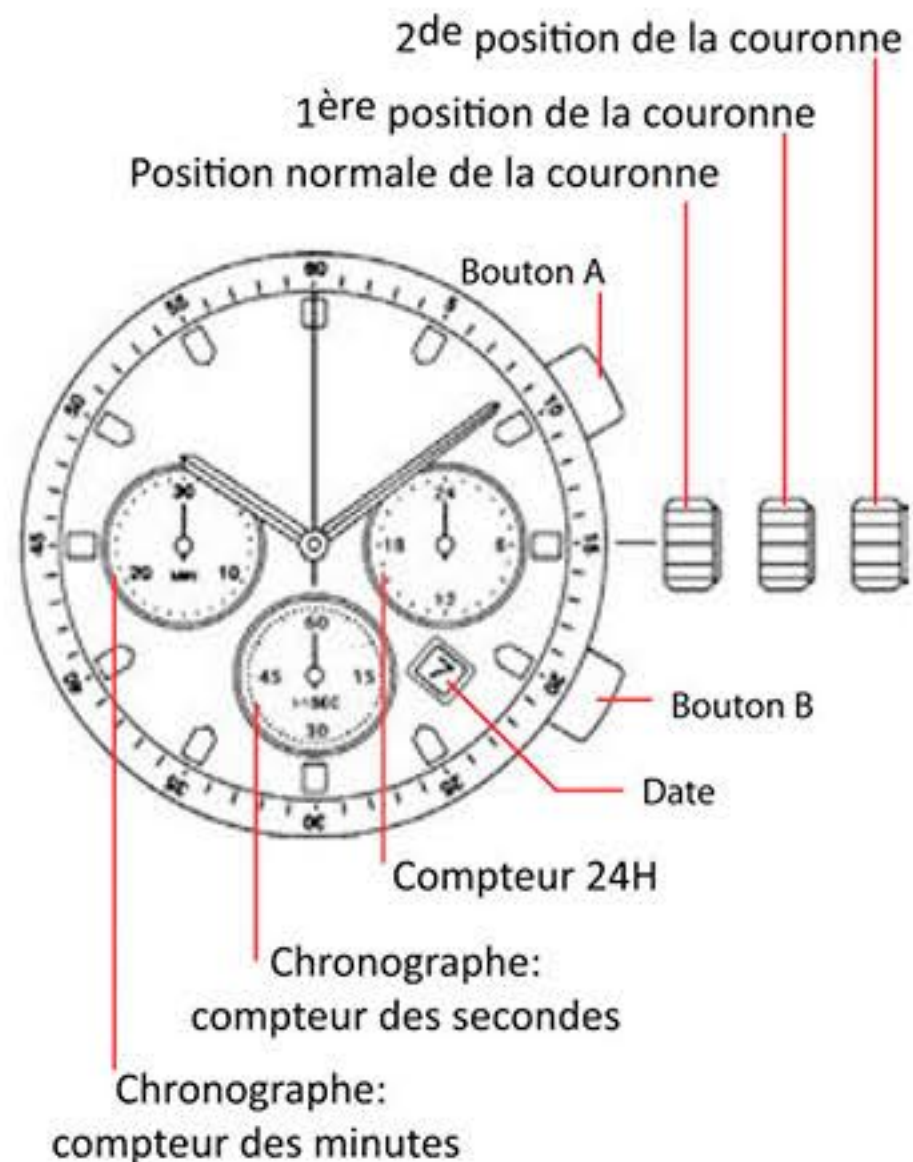

La montre indique :  
Heures, minutes, secondes et date.

■ **Réglage de l'heure:**

Tirer la couronne jusqu'à la deuxième position et la tourner dans le sens horaire pour obtenir l'heure voulue. Clore le réglage en la replaçant à sa position normale. La trotteuse du compteur des secondes se remet en route.

■ **Réglage de la date:**

Tirer la couronne jusqu'à la première position et la tourner dans le sens horaire pour obtenir la date voulue. (Si la date est réglée entre 9h00 du soir et 1h00 du matin, il est possible qu'elle ne change pas le jour suivant). Clore le réglage en replaçant la couronne à sa position normale.

■ **Utilisation du chronographe:**

Le chronographe peut mesurer et afficher des temps par unités d'une seconde, d'une seconde à 29 minutes 59 secondes.

■ **Mise en marche:**

Appuyer sur le bouton A :  
Le chronographe démarre.  
Réappuyer sur le bouton A :  
Le chronographe s'arrête.

En pressant le bouton A de nouveau,  
le chronographe se remet en marche.

Remettre à zéro : appuyer sur B.

■ **Réinitialisation du chronographe:**

Ce type de réglage s'effectue après le remplacement de la pile et lorsque la trotteuse du chronographe ne revient pas à zéro après la remise à zéro.

Tirer la couronne jusqu'à la 2<sup>de</sup> position.

Appuyer sur le bouton A : l'aiguille du compteur des secondes avance (elle avancera rapidement en maintenant le bouton A appuyé).


Appuyer sur le bouton B : l'aiguille du compteur des secondes recule (elle reculera rapidement en maintenant le bouton B appuyé).

Enfoncer la couronne à sa position normale lorsque l'aiguille a été remise à zéro.

**INSTRUCTION  
MANUAL  
N°511**

**MAIN FEATURES:**

- CHRONOGRAPH
- DATE INDICATOR

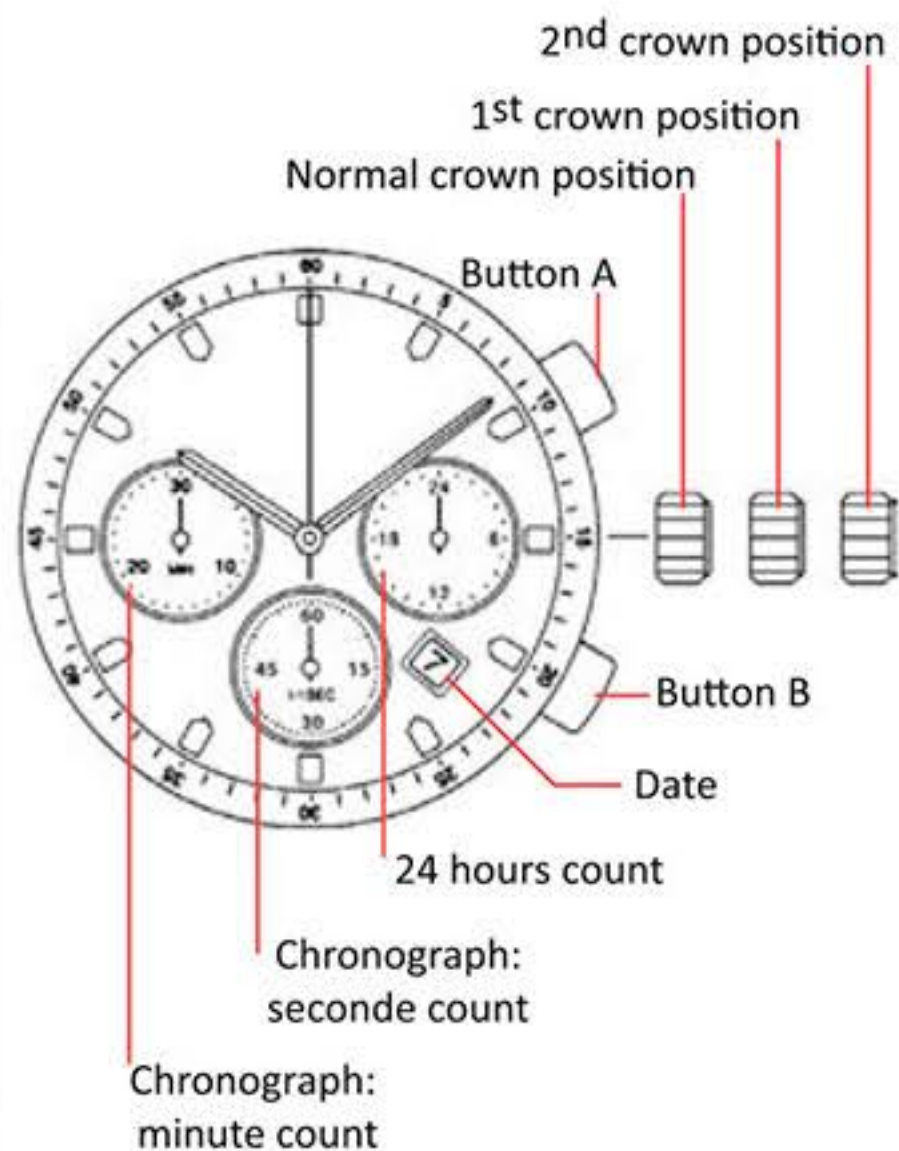

This watch give :  
Hours, minutes, secondes and date.

■ **Time setting:**

Pull the crown out to the 2nd position. Unscrew clockwise to set hour and minute hands.

When the crown is pushed back to the normal position, seconde count hand begins to run.

■ **Date setting:**

Pull the crown out to the 1st position. Turn it clockwise to set the date.

(If the date is set between 9:00 PM and 1:00 AM, the date may not change on the following day).

After the date has been set, push the crown back to the normal position.

■ **Using the chronograph:**

This chronograph is able to measure and display time in units of one seconde to a maximum of 29 minutes 59 secondes.

■ **Measuring time with the chronograph:**

Start the chronograph by pressing button A.

Stop by pressing button A again.

Start again by pressing button A a third time.

Reset by pressing button B : second and minute counts hands return to zero position.

■ **Chronograph reset :**

This procedure should be performed if count second hand does not return to zero position after chronograph stopping or after the battery has been replaced.

Pull the crown out to the 2nd position. Press button A to advance the second count hand (It advance rapidly by pressing button A continuously.)

Press button B to retreat the second count hand (It retreat rapidly by pressing button B continuously.)

When the hand is at zero position, push the crown back to normal position.